



Really Right Stuff®


205 Higuera St, San Luis Obispo, CA 93401 USA

1-805-528-6321 | 1-888-777-5557

www.ReallyRightStuff.com

L-PLATES

PLATE ID: _____

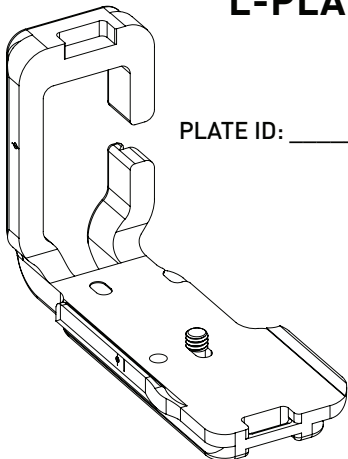

THANK YOU for choosing a Really Right Stuff L-plate. Our customized camera body L-plates are Arca-style quick-release compatible. They are optimized for precision, lightweight, and comfort. All Really Right Stuff L-plates are CNC machined from solid billet 6061-T6 tempered aluminum. They are black anodized, sealing them against corrosion and abrasion.

®, ™, © 2011 Really Right Stuff, LLC.

All rights reserved.

FEATURES:

Connection Port Clearance permits the opening of port doors and allow clearance for camera tethering cables like USB, HDMI, remote shutters, etc. Shape of side of L-plate varies with model.

Strap Pocket straddles your camera's strap lug and enhances anti-twist (not on all models).

Centering Index Marks

are laser engraved and indicate the center of the lens. Centering your camera is critical when shooting panoramas. Line up the index marks on both plate and RRS clamp and your camera will be perfectly centered.


Anti-Twist Flange(s) hug the contour of your camera to prevent twisting.

Mounting Screws

join conventional plate and L-component to deliver a strong L-plate that will not flex under load. Occasionally use included hex key to check tightness.

Modular L-Plates

have two pieces; base can be used alone or add L-component to create robust L-plate.

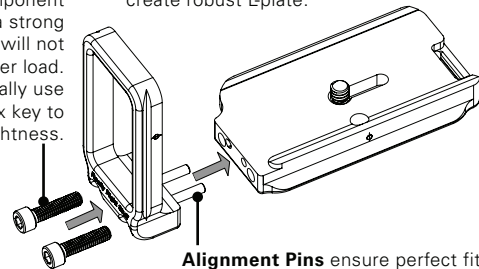


Alignment Pins ensure perfect fit and enhance the connection.

Mounting Hole or Slot accepts custom RRS mounting screw (installed; use included hex key to tighten). Some plates have a slot to allow lateral adjustability. Keep plate snug against camera for lowest profile, but slide plate away from side of camera to create additional clearance for tethered cables.

Captive Mounting Screw

is used to attach the L-plate to the camera. Shape and size of the screw varies among models. Plate bottom also includes ¼"-20 accessory socket.

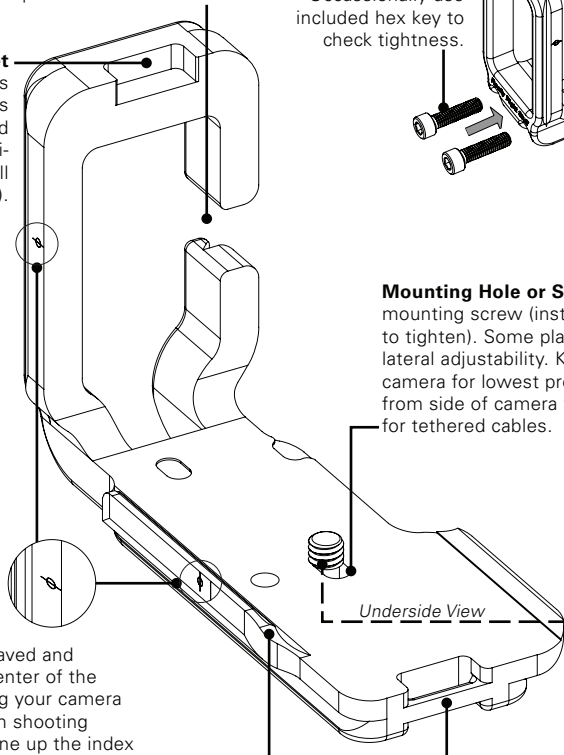


Underside View

Strap Lug provides anchor point for optional neck or hand strap (not on all models).

INSTALLATION


Wipe off bottom of camera to prevent trapping dirt or grit. **Looking at the front of the camera, place the vertical dovetail on the right side.**

Use included hex key to gently tighten screw, then check fit and position vertical dovetail as close as possible to side of camera. Firmly tighten mounting screw.

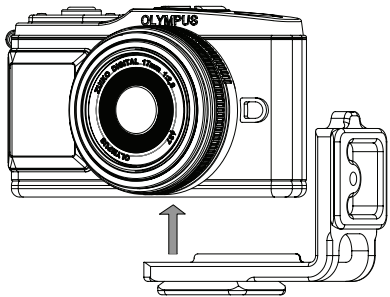

Note About Dovetail Orientation


Most RRS quick-release plates for camera bodies, including L-plates, have a dovetail that slides left-right in the clamp (to allow for centering). But some RRS plates have a bidirectional dovetail to allow for either left/right or fore/aft positioning.

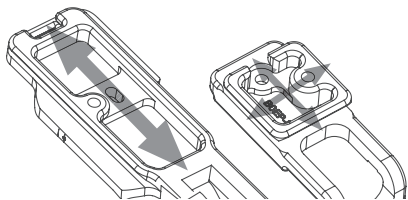

MOUNTING


Lever-Release Clamp

If you have a Really Right Stuff lever-release clamp, simply snap the lever to the **fully** open position and top load your gear. Snap lever halfway shut and plate can still be shifted for final positioning. Snap lever shut to lock plate in place.

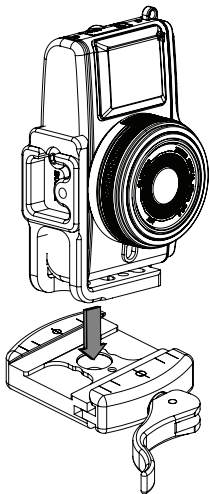

Screw-Knob Clamp

If you have a screw-knob clamp, you may top load **or** side load your gear, but side loading is faster. To release, turn knob counterclockwise one-half turn and slide your gear out of the clamp.

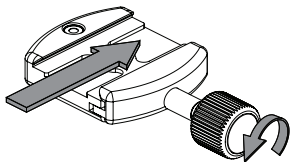


GUARANTEE

ALL REALLY RIGHT STUFF BRAND PRODUCTS ARE GUARANTEED TO THE ORIGINAL PURCHASER TO BE FREE OF DEFECTS IN MATERIALS OR WORKMANSHIP FOR FIVE (5) YEARS FROM THE DATE OF PURCHASE. PRODUCTS WILL BE REPAIRED OR REPLACED AT OUR OPTION.

PORTRAIT MODE

Switching back and forth from landscape to portrait orientation is a snap with your L-plate. Simply open your quick-release clamp, remove camera with its L-plate, re-mount in vertical orientation, and close clamp.

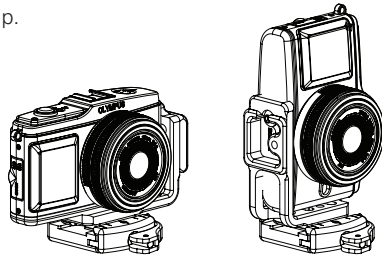

Note About Cable Releases & Tethering:

On some camera models, installing a cable may prevent you from **CENTERING** the camera when shooting in portrait. To solve this, some L-plates have a mounting **slot** instead of a threaded **hole**. To create additional clearance on the side of the camera, loosen the mounting screw slightly, slide the plate **away** from the side of the camera, and retighten screw.

